




## 1. DOUBLE TAP IN THE UPPER LEFT HAND CORNER OF THE SCREEN

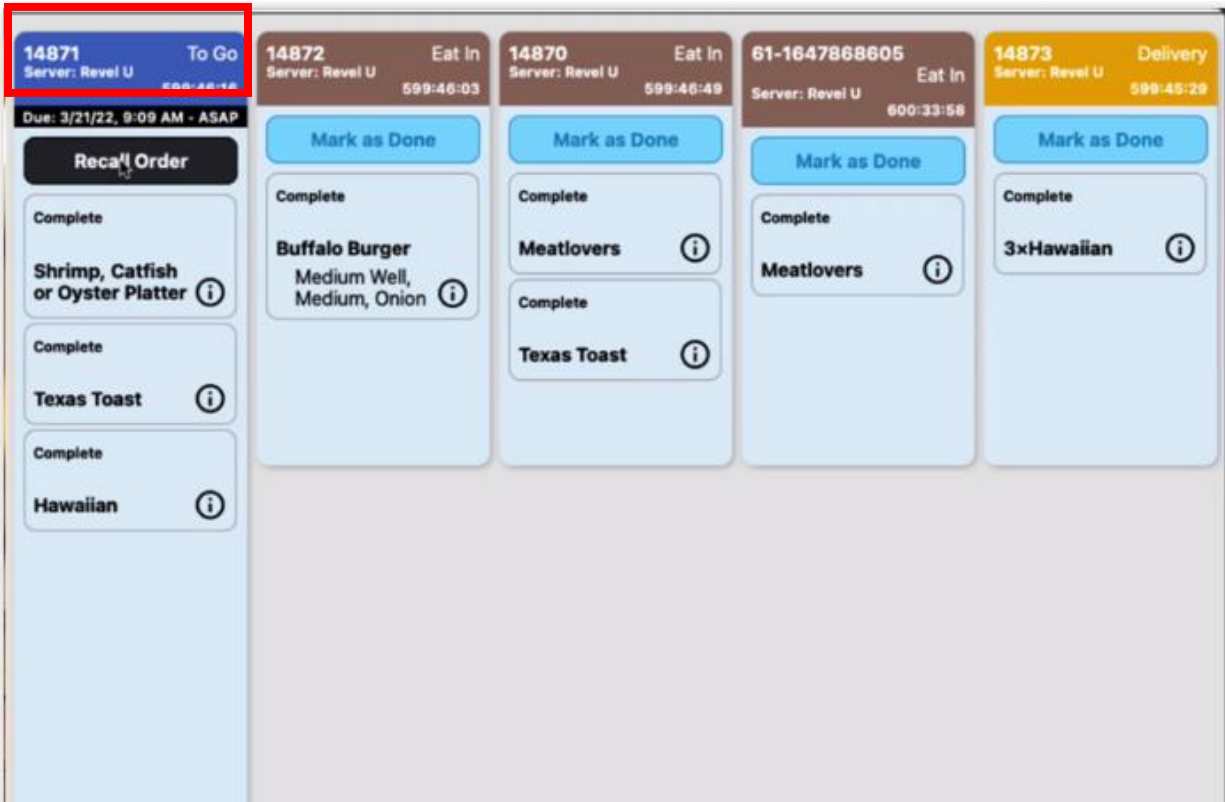

## 2. A GREEN MENU BAR WILL APPEAR

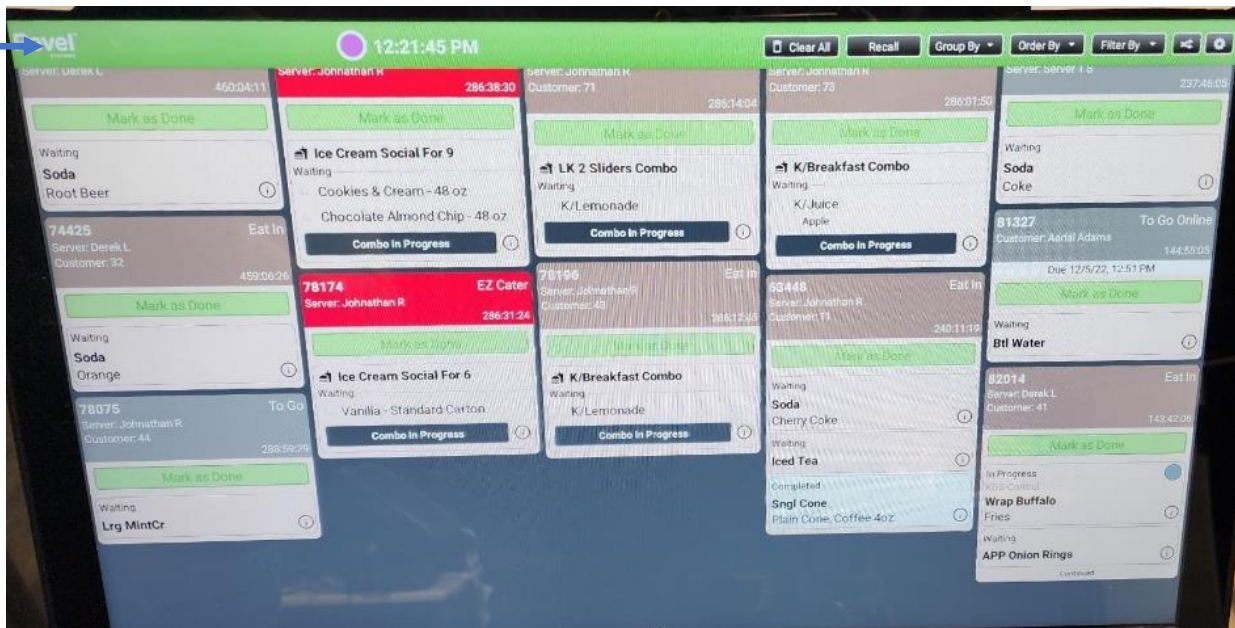

## 3. CLICK ON FILTER BY AND SET EACH KDS PER THE EMAIL TO THEN CORRECT ORDER OPTIONS

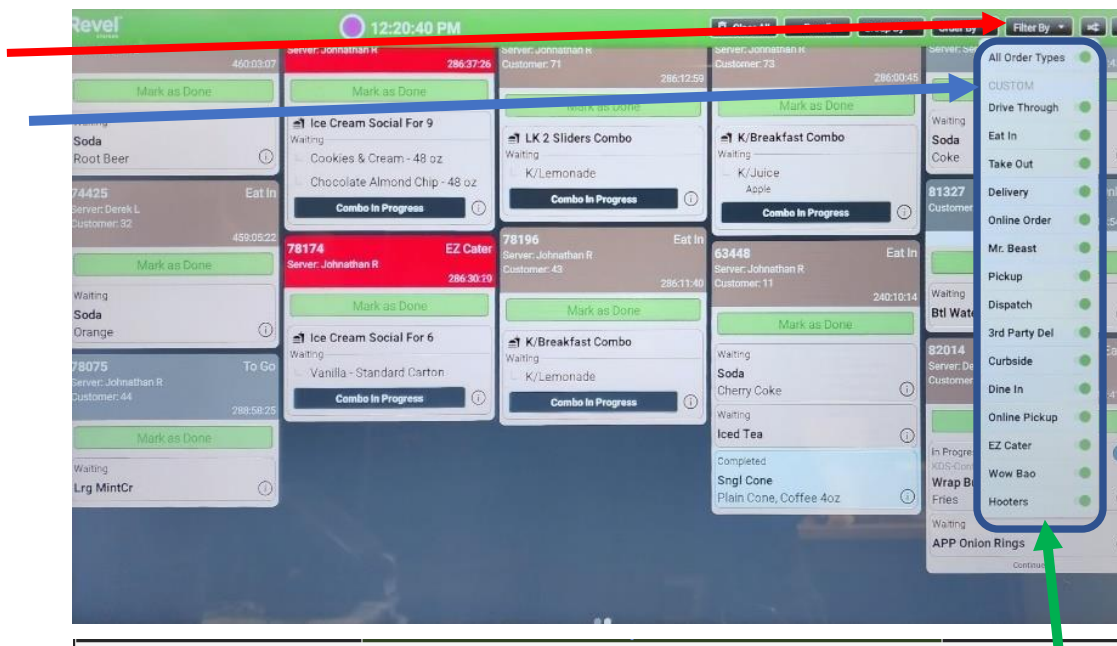

KITCHEN DISPLAY SCREENS		
KDS-Control	Kitchen Display -Control/Main: <b>IN KITCHEN</b> All Order Types, Items Exclude Fountain Items	1 (All but Mr. Beast)
KDS-DT Control	Kitchen Display -Control/Main: <b>IN KITCHEN/DT ONLY</b> DT Only, Exclude Fountain Items	1 (Mr. Beast ONLY)
KDS-Expo	Kitchen Display -Expo: <b>AT SERVICE LINE - COMPLETED ORDERS</b> Mixed Order Types, Items Exclude Fountain Items	1 (In House only)
KDS-Expo2	Kitchen Display -Service Expo: <b>AT SERVICE LINE - COMPLETED ORDERS</b> Mixed Order Type, Items Exclude Fountain Items	1 (Exclude In House)
KDS-FountainExpo	Kitchen Display -Fountain Expo: <b>IN FOUNTAIN AREA - COMPLETED ORDERS</b> Miced Order Types, Items Exclude Kitchen Items	1
KDS - Remote Bump Bar	<b>KDS - Remote Bump Bar (IN CASE)</b> - Used in case of high mounted KDS	1



This is only an example, please refer to the Email from Derek Linders titles "Your Revell Install Tonight".