 




Adjusting Printer Font Size


Step 1) Follow the below steps from your **MAIN** terminal (*typically POS1*)

- Sign into your POS Screen using your manager swipe or PIN.
- Once in the Dashboard press the **Settings** icon on the bottom right of the screen.

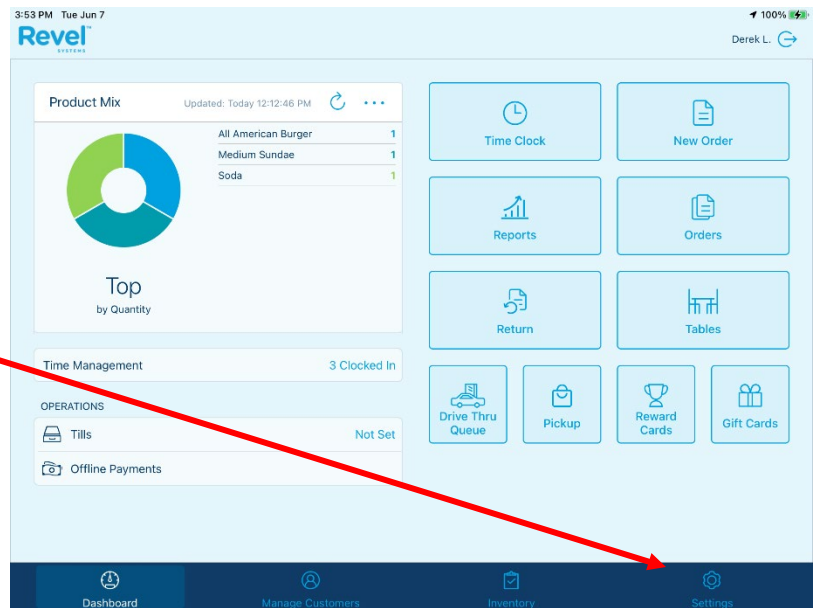


Step 2) Adjust FONT Size

- Press **Printers** from the settings menu.
- Identify the printer you would like to adjust the font size. Select **Font Size**.

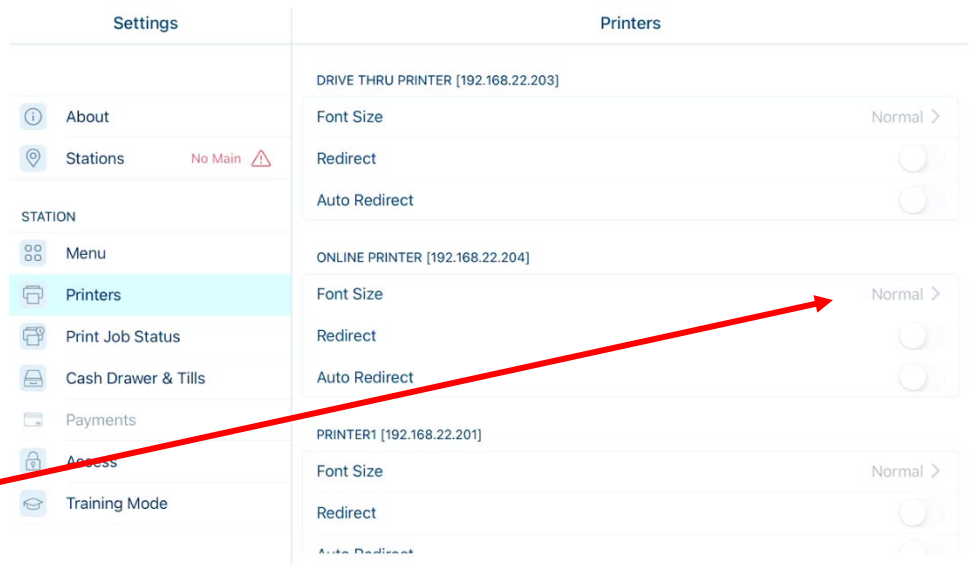

- Select the **Font Size** desired between **Normal** and **Large**.

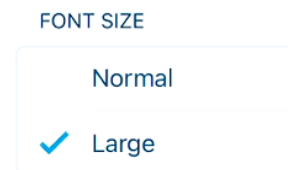

FINAL STEP: Sign out and return to the Keypad Screen.

Refresh all devices.

